

JCB35N height adjustable table system error code		
Error Code	Error summary	Description
E01	M1 overcurrent protection	Handset shows E01 , All Columns Stop Working , Press any key shows RST , System need reset
E02	M2 overcurrent protection	Handset shows E02 , All Columns Stop Working , Press any key shows RST , System need reset
E03	M3 overcurrent protection	Handset shows E03 , All Columns Stop Working , Press any key shows RST , System need reset
E04	M4 overcurrent protection	Handset shows E04 , All Columns Stop Working , Press any key shows RST , System need reset
E05	M5 overcurrent protection	Handset shows E05 , All Columns Stop Working , Press any key shows RST , System need reset
E06	M6 overcurrent protection	Handset shows E06 , All Columns Stop Working , Press any key shows RST , System need reset
E07	M1 Hall Error	Handset shows E07 , All Columns Stop Working , Press any key shows RST , System need reset
E08	M2 Hall Error	Handset shows E08 , All Columns Stop Working , Press any key shows RST , System need reset
E09	M3 Hall Error	Handset shows E09 , All Columns Stop Working , Press any key shows RST , System need reset
E10	M4 Hall Error	Handset shows E10 , All Columns Stop Working , Press any key shows RST , System need reset
E11	M5 Hall Error	Handset shows E11 , All Columns Stop Working , Press any key shows RST , System need reset
E12	M6 Hall Error	Handset shows E12 , All Columns Stop Working , Press any key shows RST , System need reset
E13	communication interrupt between controller A and B	Handset shows E13 , All Columns Stop Working , Press any key shows RST , System need reset
H01	over heat protection/Duty cycle protection	Handset shows H01 , All Columns Stop Working , Press any key useless , Handset shows current height after rest