


- Notes:**
- 1.M1 and M2 are interfaces on the N2 control box sides which are used in connecting lifting columns.
  - 2.M3 is the interface on the N3 control box side which is used in connecting the third column.
  - 3.E07 means M1 Hall error, if handset still display error code after reset, We need troubleshooting.
  - 4.E08 means M2 Hall error, if handset still display error code after reset, We need troubleshooting.
  - 5.E09 means M3 Hall error, if handset still display error code after reset, We need troubleshooting.

# Trouble Shooting Guide

Connect cables to CU / Motor / Power Supply

\*Please mark "√" or "x" in the after you perform this step. Or write down the comments in the bottom comments list if you have any inquiries.

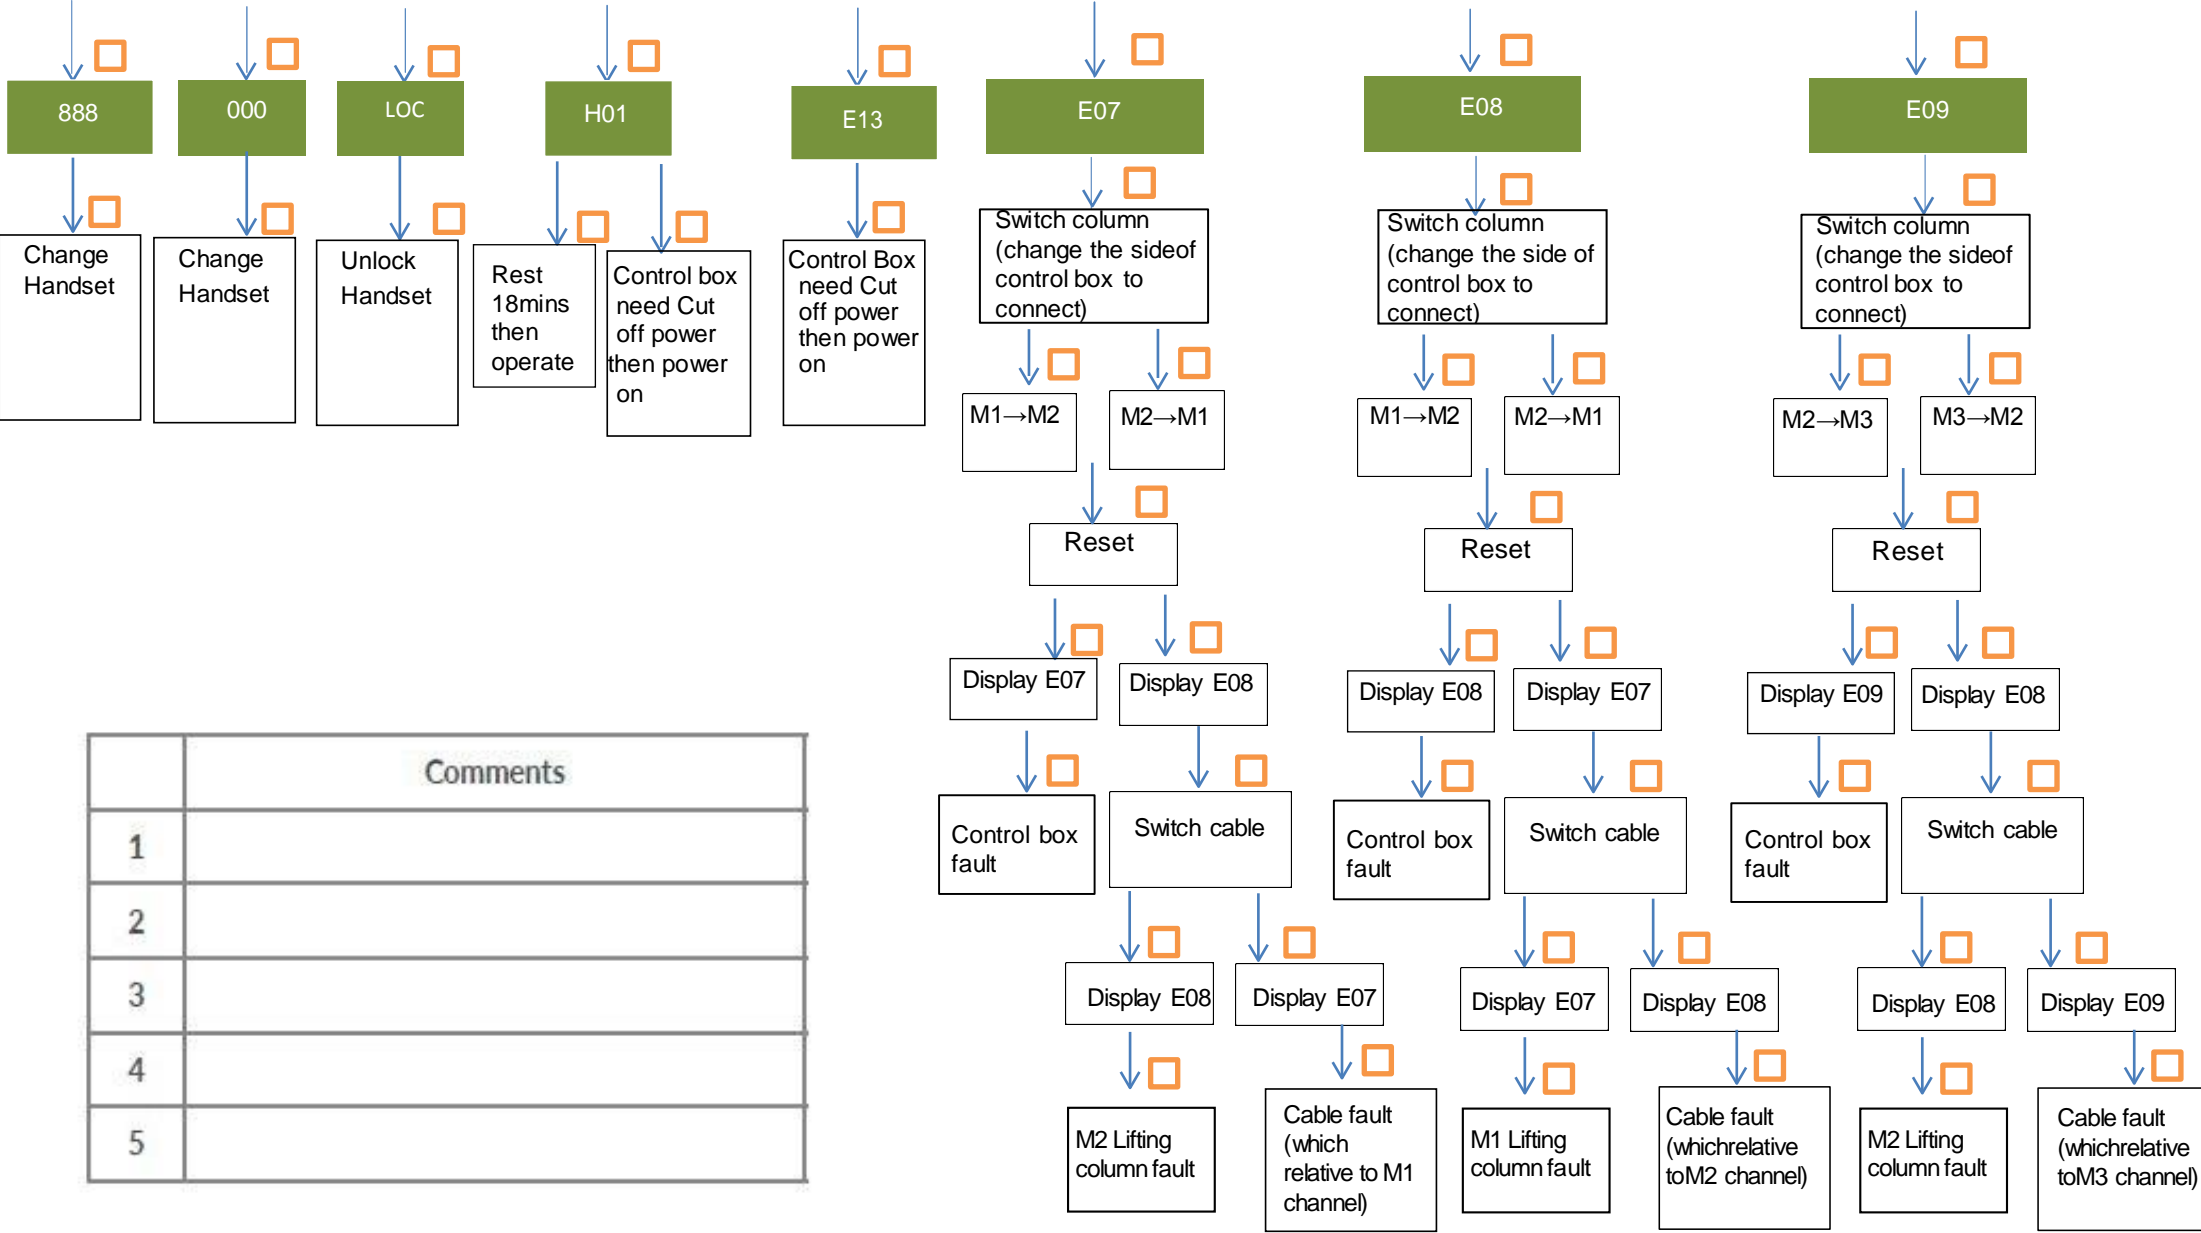

	Comments
1	
2	
3	
4	
5	