


START MONTAGE ALTIJD ONDERAAN/  
 COMMENCEZ TOUJOURS LE MONTAGE PAR LE BAS/  
 ALWAYS START AT THE BOTTOM ROW  
 VOORBEELD/EXEMPLE/EXAMPLE:

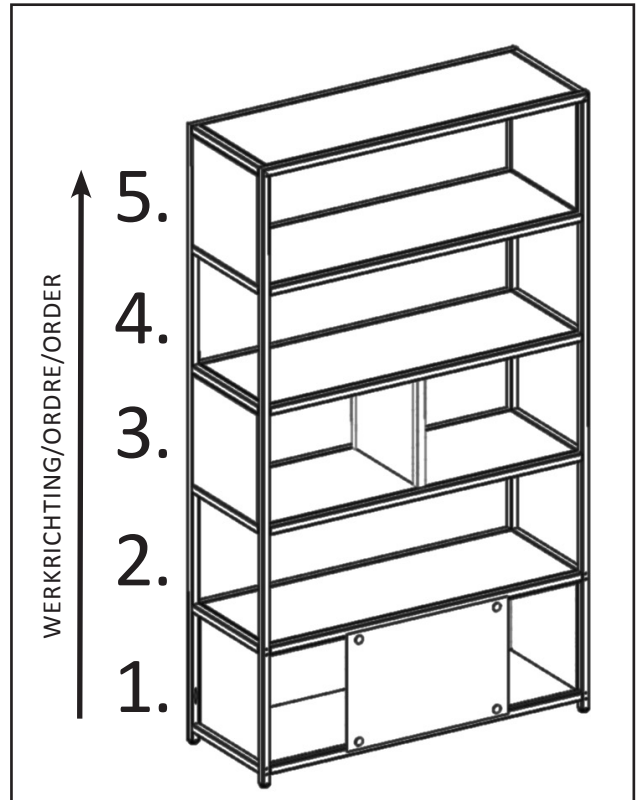

**BZ000217**

**STAN ACCESSOIRES**

G007170

2021 / 05 / 06



**VOLGORDE PER NIVEAU/ ORDRE/ ORDER:  
 LEGBORD/ TABLETTE / SHELF**

1. \*SNAP\*
- 2.
3. \*OPTIONAL



**HOUT RUG/ DOS BOIS/ WOODEN BACK**

1. \*SNAP\*
2. BOTTOM SIDE
3. WERKRICHTING/ORDRE/ORDER

## METAAL VAK / COMPARTIMENTS / COMPARTMENTS


1.

HALF VAK/  
DEMI-COMPARTMENT/  
HALF COMPARTMENT

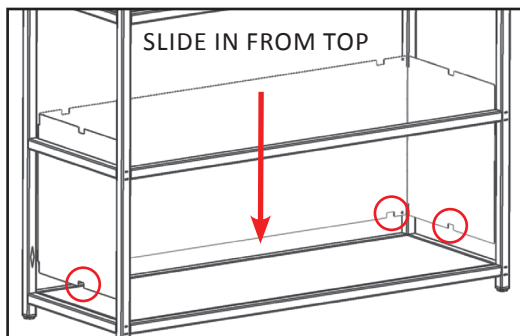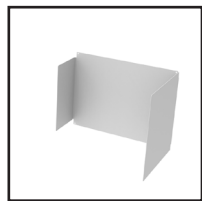

PLACE BOTTOM BRACKETS  
IN CORRECT SLOT FOR COMPARTMENT



2.

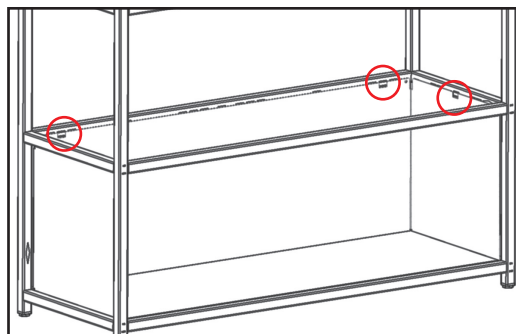


PLACE TOP BRACKETS  
IN OPEN SLOTS

## SCHEIDING / SÉPARATION / DIVIDER

1.

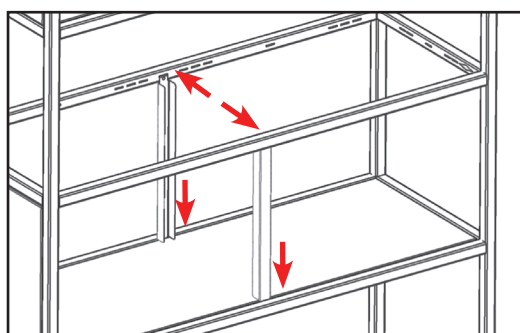


2.

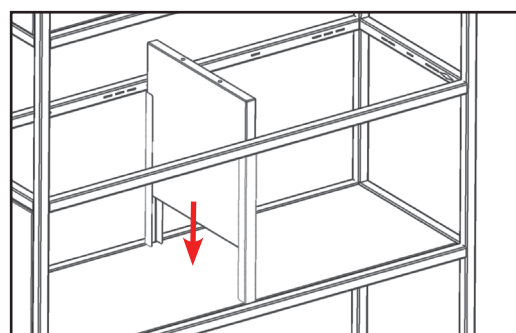

## METAAL DEUR / METAL PORTE / METAL DOOR


1.

REMBLOKJES TEGEN ZIJKANT/  
PLAQUETTES DE FREIN CONTRE LE CÔTÉ/  
BRAKE PADS AGAINST THE SIDE

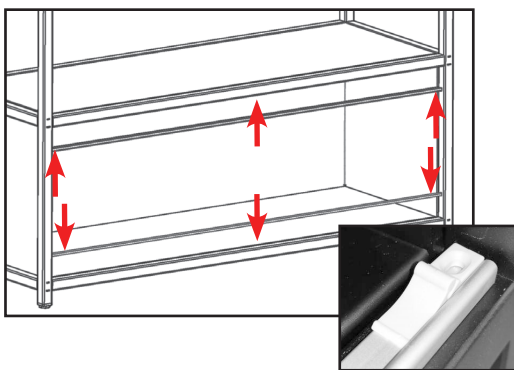


2.

LOSJES VASTSCHROEVEN/  
VIS SANS SERRER/  
SCREW LOOSLY

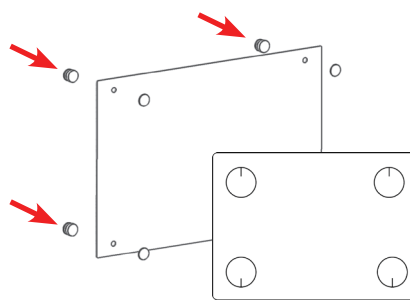



3.

DRAAI DE WIELEN VAST/  
SERREZ LES ROUES EN PLACE/  
TIGHTEN WHEELS IN PLACE

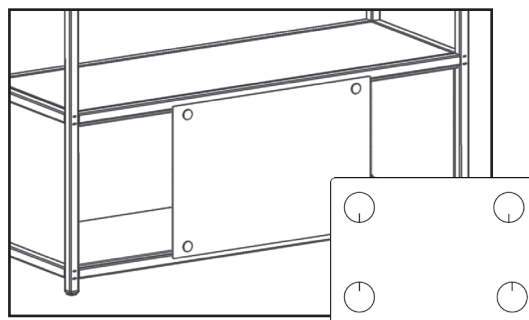

## KOPPELSTUK / CONNECTEURS / CONNECTORS

1.

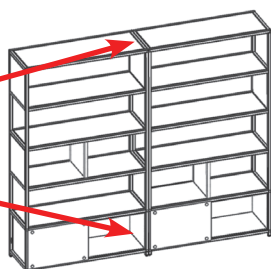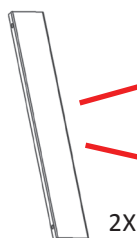

2.

